


Heckler & Koch P7 K3 Buffer Installation



Remove magazine and make sure pistol is unloaded. Field strip slide from frame and set aside.

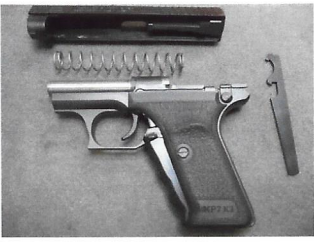


Remove barrel nut using the tool that came with your pistol. To loosen, turn the nut counter clockwise if Looking toward the front of the gun. Slide the nut off the barrel. Tap the barrel, muzzle down on a hard surface protecting the crown with a rag or you can use a small plastic hammer.



Remove the barrel toward the rear of the pistol.



Remove both grip panels. If you have not done this before, here's how it's done: Lift up slightly on the top front of the grip using your finger nail, just enough to clear the recess in the frame. Now pull down and forward at the same time. The grip should come right off.

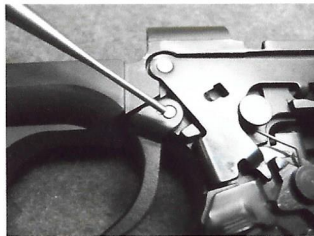

Locate the trigger pin,
IT IS IMPORTANT THAT YOU DO NOT REMOVE THE PIN COMPLETELY !



Working from the LEFT side of the pistol, tap the pin using the supplied aluminum punch. It will move the trigger pin just far enough to clear the slot in the buffer.



Using a small screw driver gently pry the old buffer out toward the front of the pistol . You can use the barrel mount ring for leverage. If the buffer is being stubborn give it a shot of penetrating oil or gun solvent and let soak in for 15-20 minutes.

Install the new buffer in exactly the same position as the old one. You can use the supplied punch to help line up the slot prior to sliding the trigger pin back in. It should go in fairly easily, if not DON'T drive it in with a hammer, YOU WILL DAMAGE THE BUFFER. you may have to rotate the buffer so the slot is indexed correctly. Reassemble your K3 and double check you work. The barrel nut must be tight but don't over do it. Just tighten until it stops As with any fine firearm always use good quality commercial ammo. Cheap or reloaded ammo may not allow the slide to lock back on the last shot.

Thank You, Scott Wilson